



ILA

(D)	MONTAGEANLEITUNG:	DUSCHWANNE AUS GUSSMARMOR
(GB)	INSTALLATION INSTRUCTIONS:	SHOWER TRAY OF CAST MARBLE
(F)	NOTICE DE MONTAGE:	RÉCEVEUR EN BETON DE SYNTHÈSE
(CZ)	NÁVOD K MONTÁŽI:	SPRCHOVÁ VANIČKA Z LITÉHO MRAMORU
(PL)	INSTRUKCJA MONTAŻU:	BRODZIK Z LITEGO MARMURU
(SK)	NÁVOD NA MONTÁŽ:	SPRCHOVÁ VANIČKA Z LIATEHO MRAMORU
(H)	SZERELÉSI ÚTMUTATÓ:	ÖNTÖTT MÁRVÁNY ZUHANYTÁL
(E)	INSTRUCCIONES DE MONTAJE:	BAÑERA DE DUCHA DE MÁRMOL COLADO
(RO)	INSTRUCȚIUNI DE MONTAJ:	CĂDIȚĂ DE DUȘ DIN MARMURĂ SINTETICĂ


A 

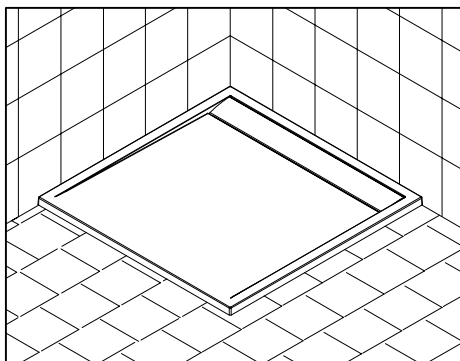

B 

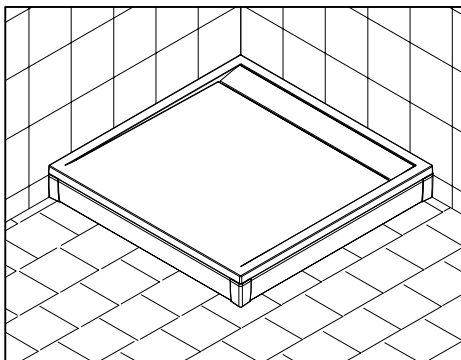

C 

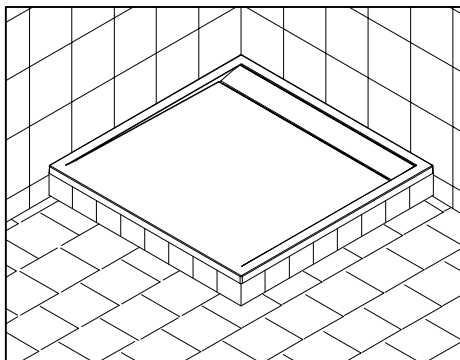

Benötigtes Werkzeug:

Necessary tools:

Outil Nécessaire:






Nářadí potřebné pro montáž:

Potrzebne narzēdzia:


Potrebné náradie:

Szükséges szerszámok:



Herramientas necesarias:

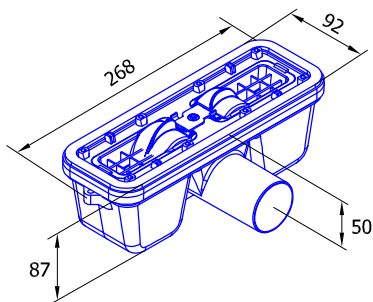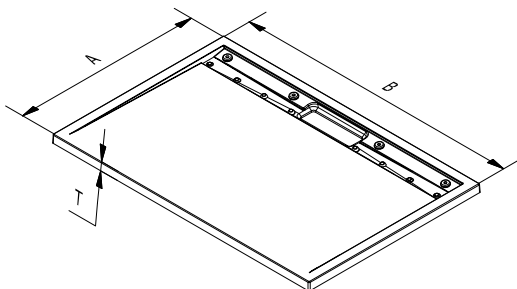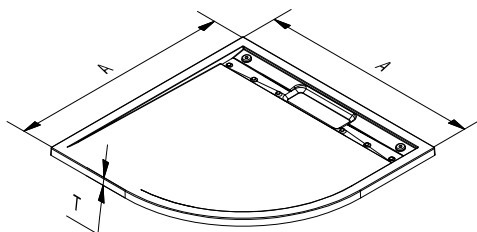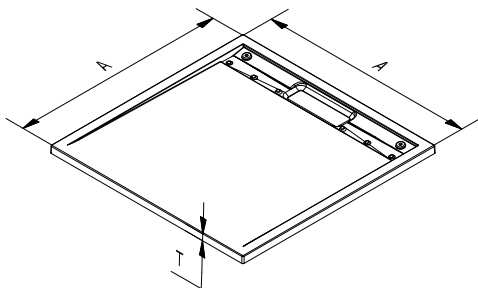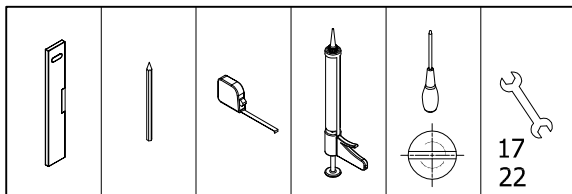


A







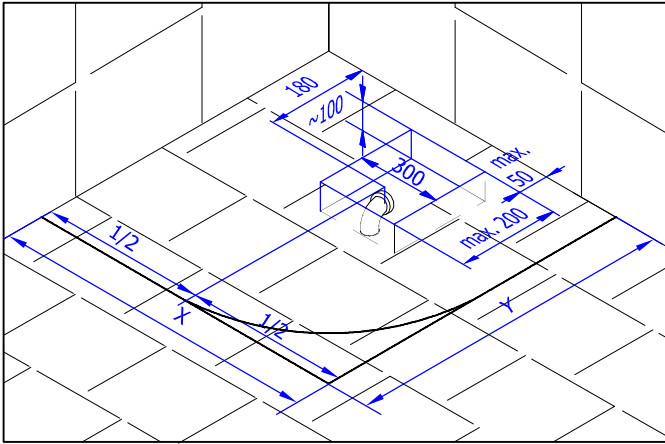


OK

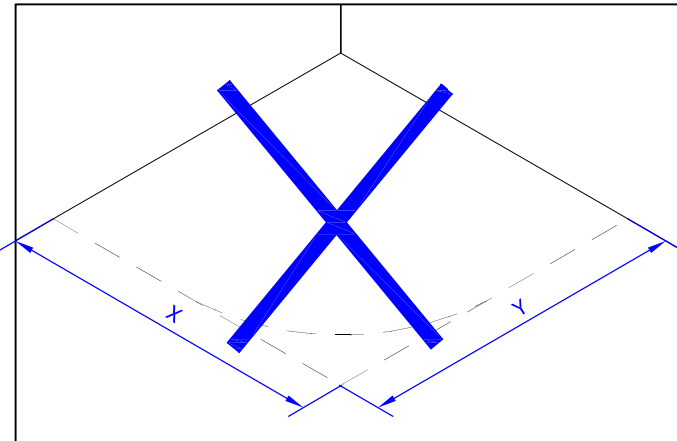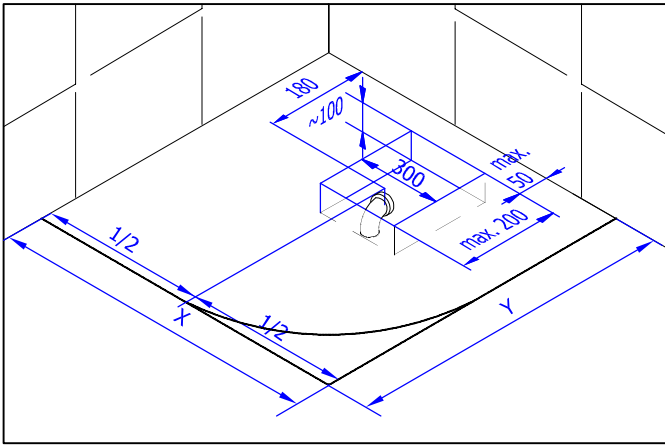


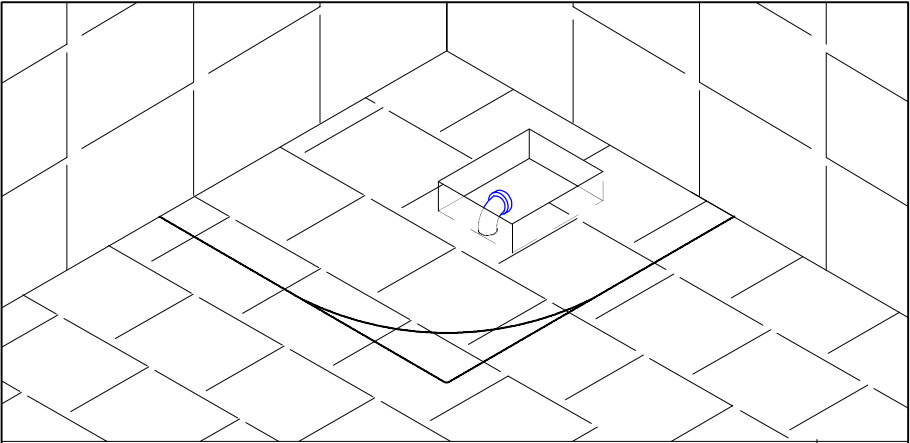


DN 50

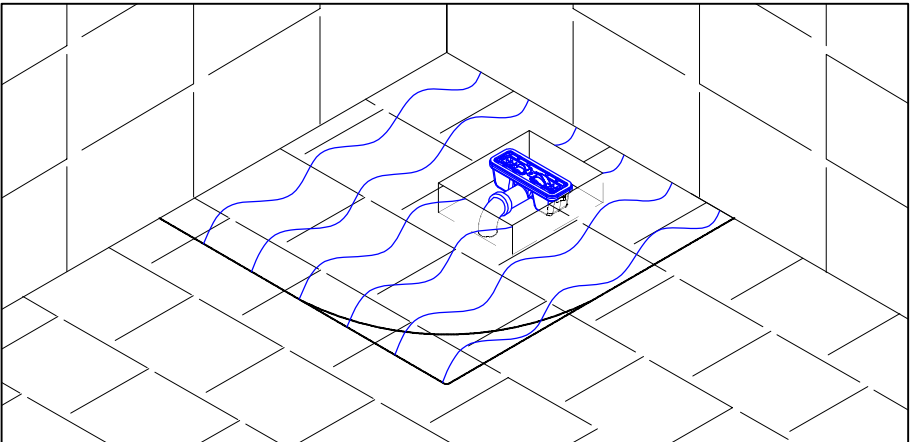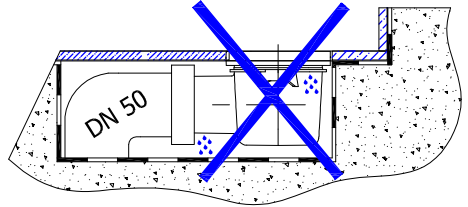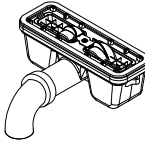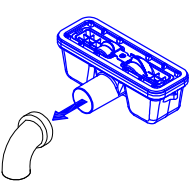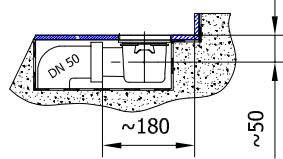


ADHESIVE/SILICONE

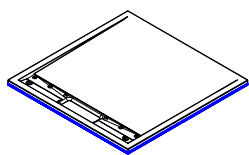





4,5 x 16 mm

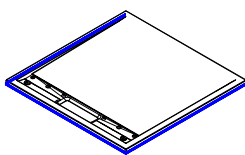


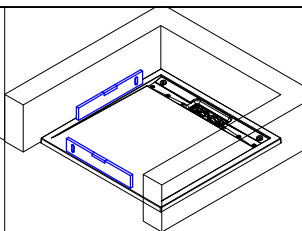
4,5 x 16 mm

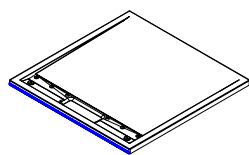


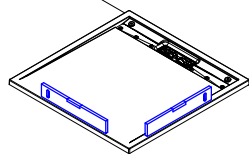
4,5 x 16 mm

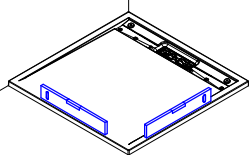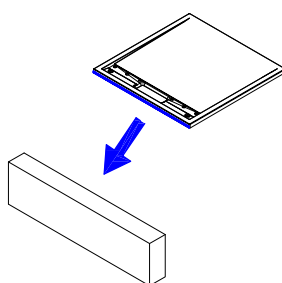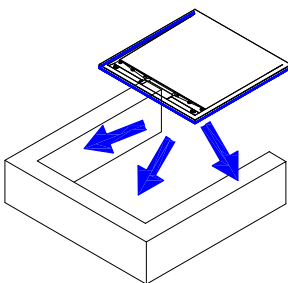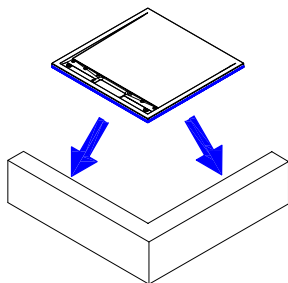


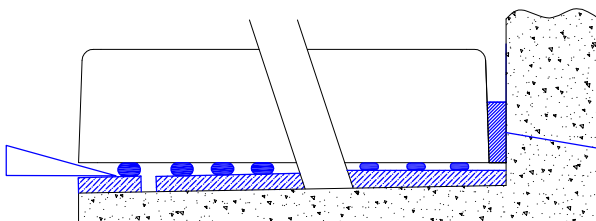
!  max 0.5 mm !



!  max 0.5 mm !








!  max 0.5 mm !




4,5 x 16 mm (3 m)



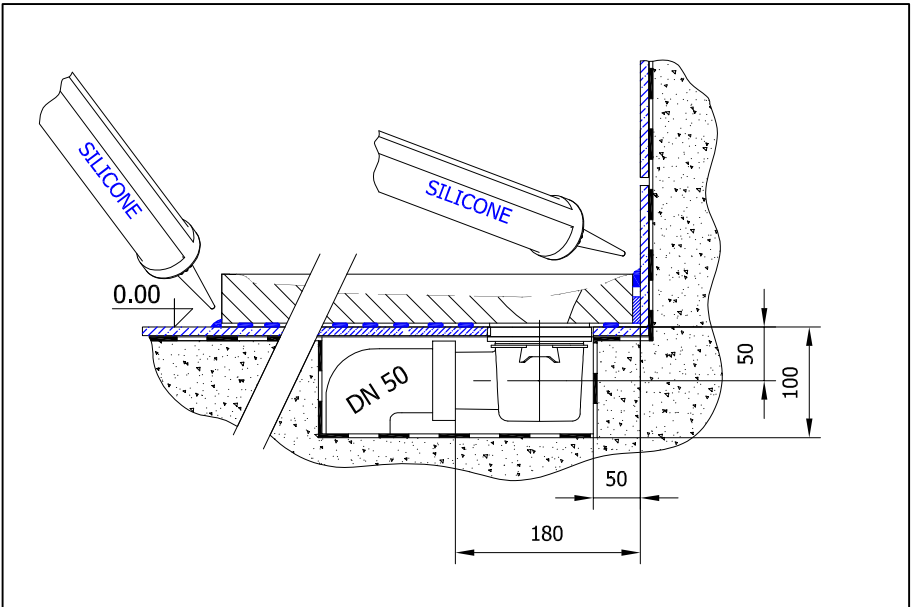
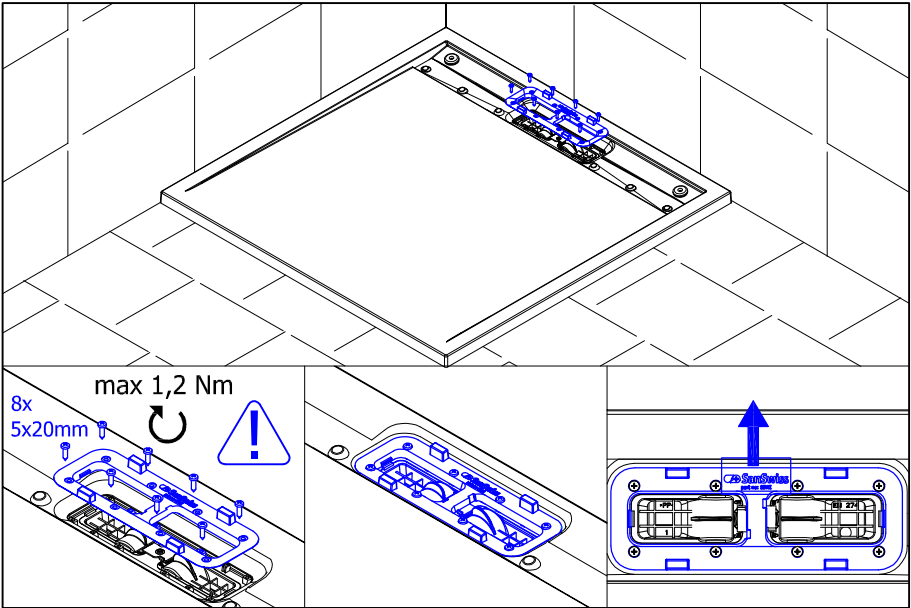


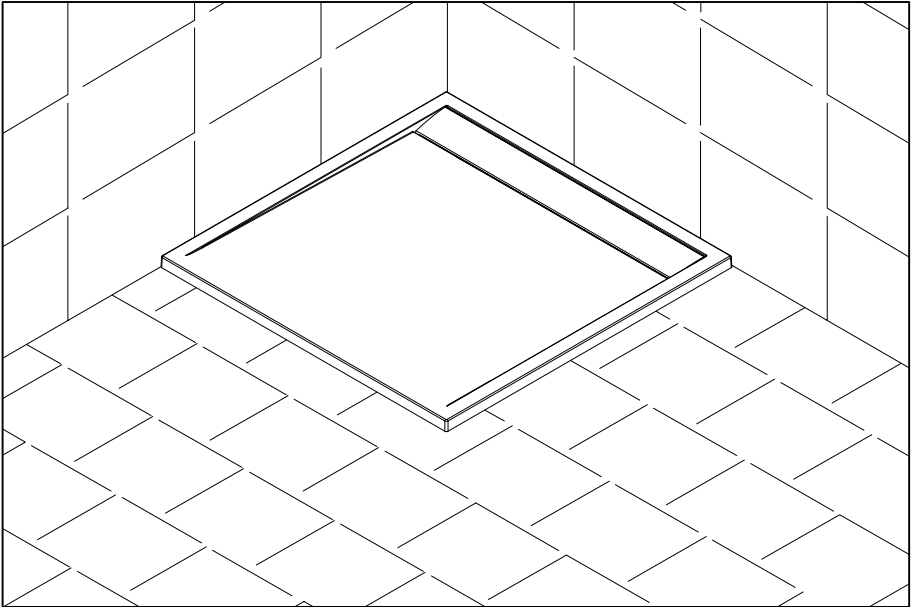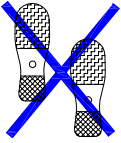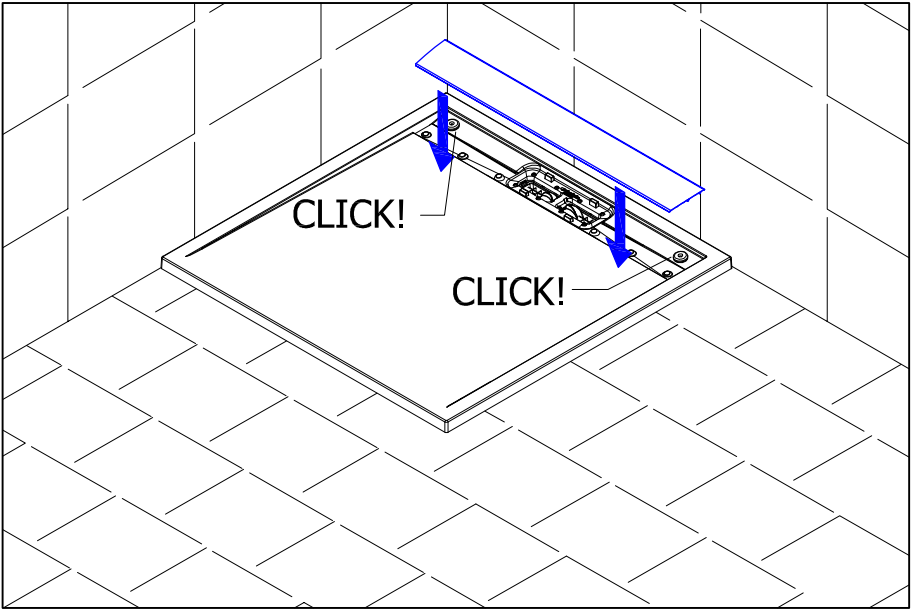


B+C

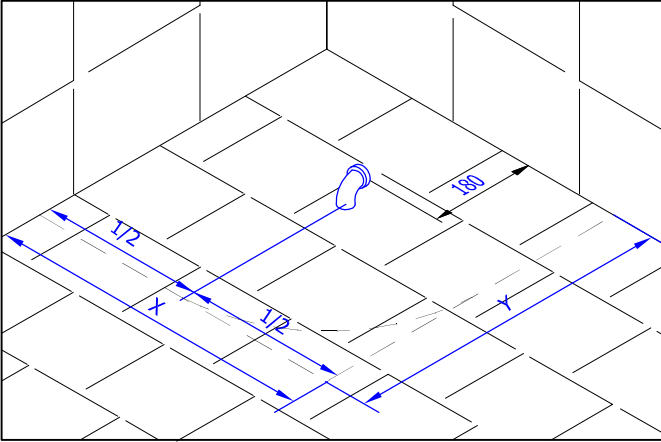



OK

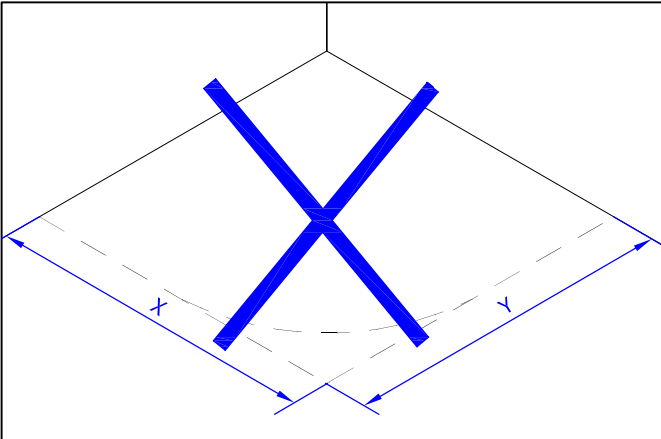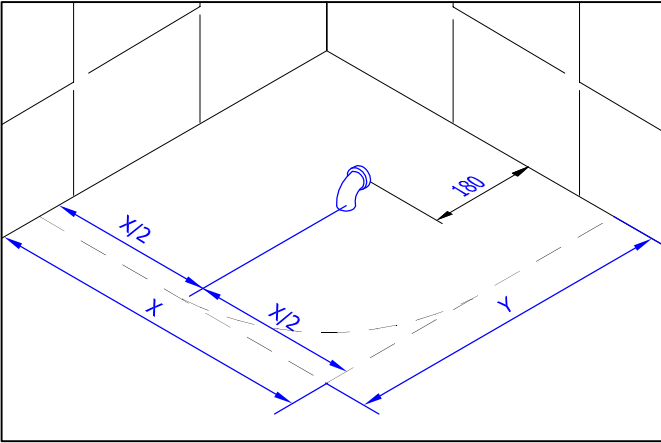






B+C



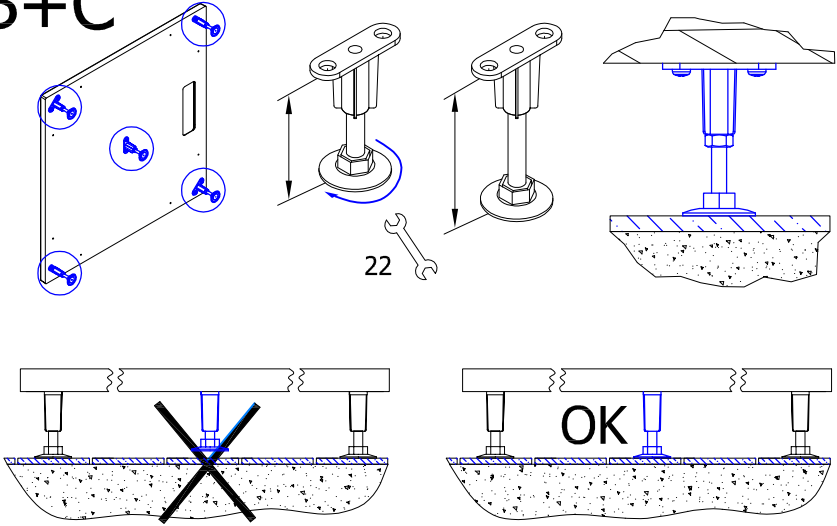









DN 50

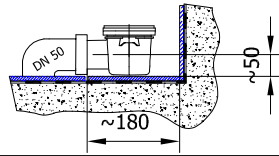


C

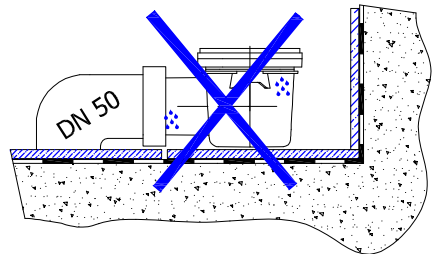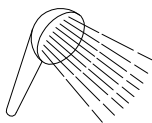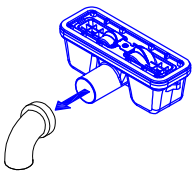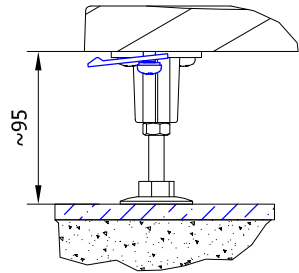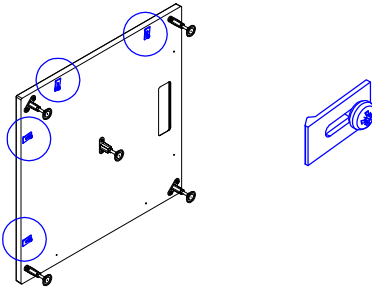

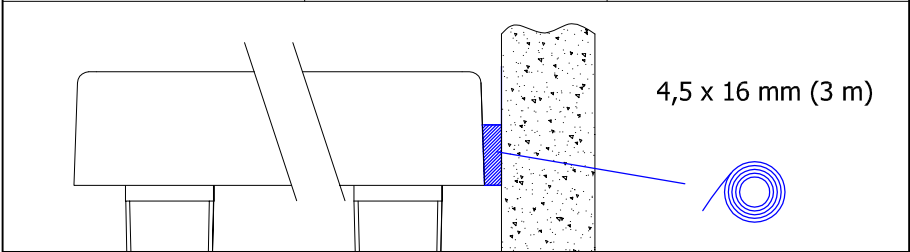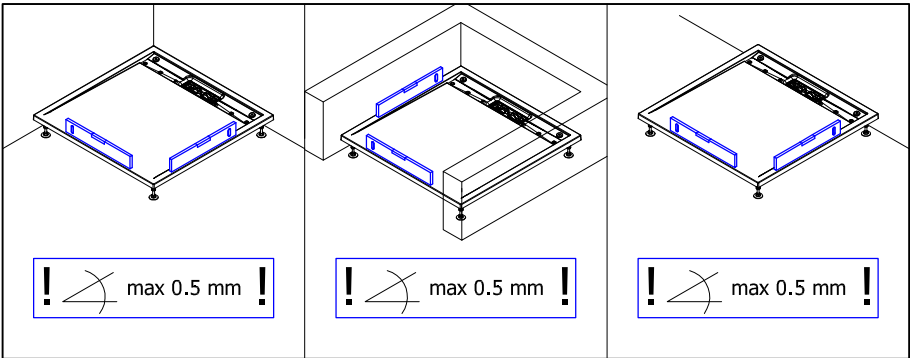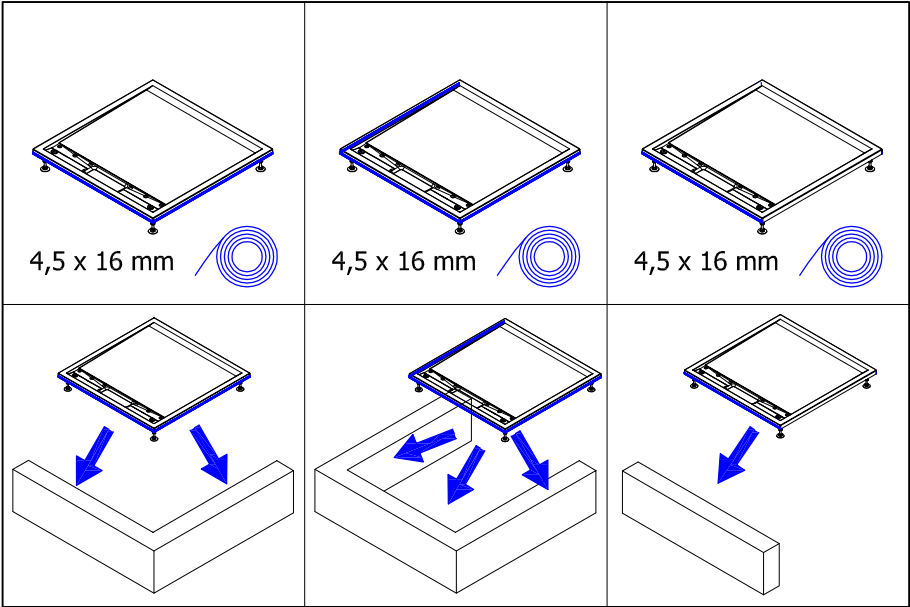

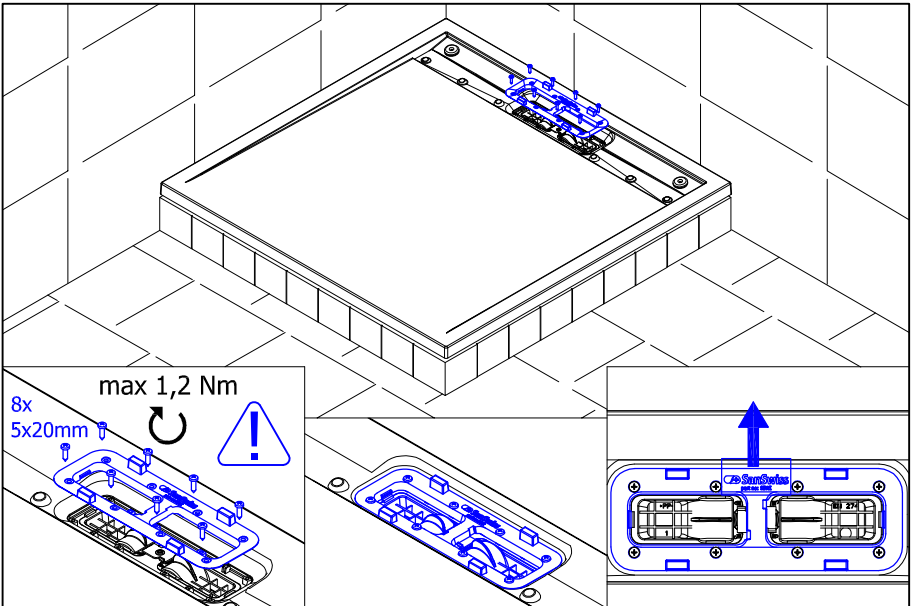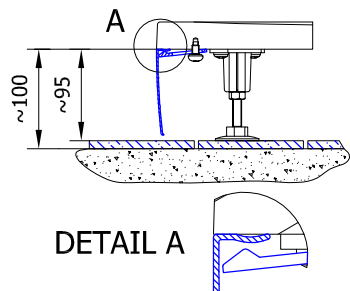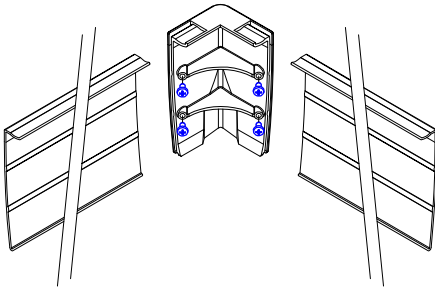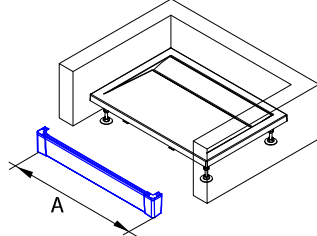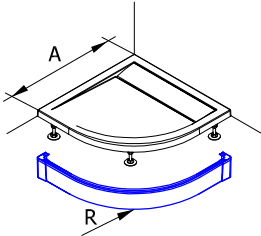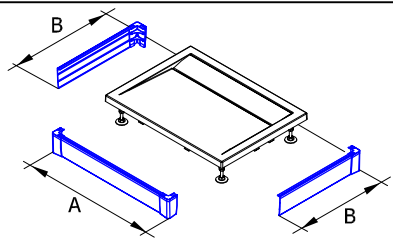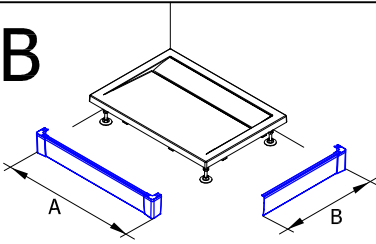B

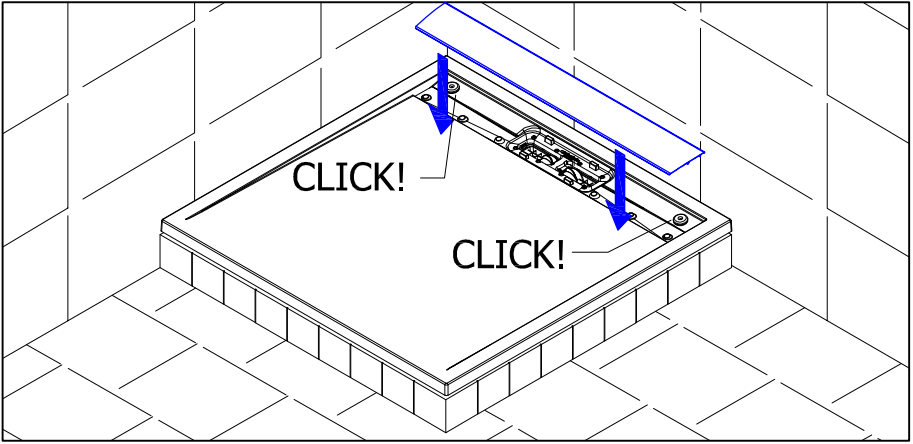

B+C

