

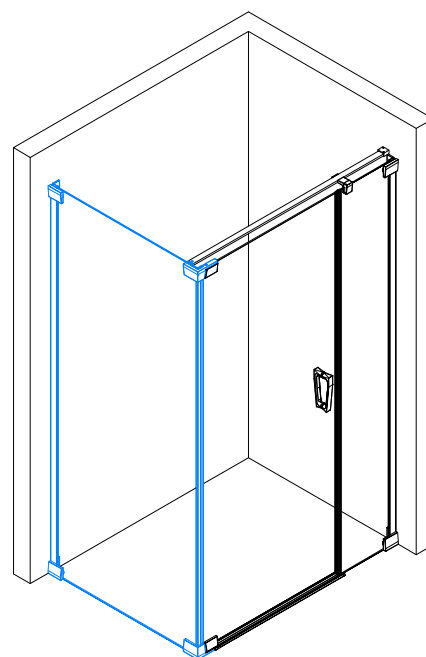
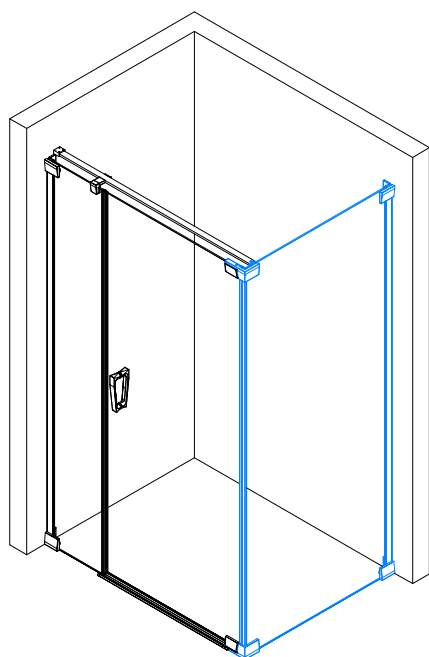
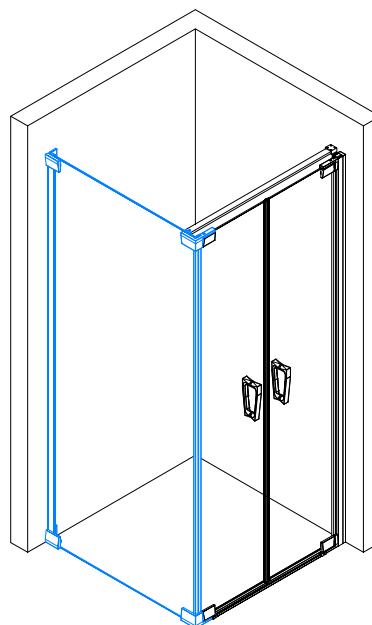


19670

DE	MONTAGEANLEITUNG:	SEITENWAND
GB	INSTALLATION INSTRUCTIONS:	FIXED PANEL
FR	NOTICE DE MONTAGE:	PAROI FIXE
CZ	NÁVOD K MONTÁŽI:	BOČNÍ STĚNA
PL	INSTRUKCJA MONTAŻU:	ŚCIANA BOCZNA
SK	NÁVOD NA MONTÁŽ:	BOČNÁ STĚNA
RU	ИНСТРУКЦИЯ ПО МОНТАЖУ:	ФИКСИРОВАННАЯ СТЕНКА
ES	INSTRUCCIONES DE MONTAJE:	LATERAL FIJO
RO	INSTRUCȚIUNI DE MONTAJ:	PERETE LATERAL

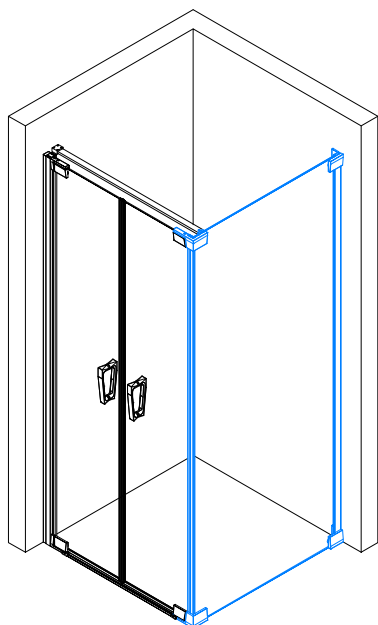

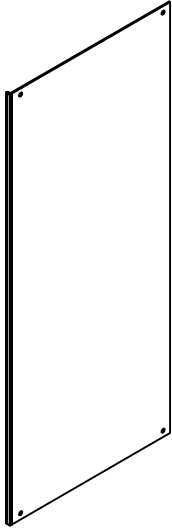

50015E150. 2000	42356. 1967	52203U2 1000.F	50314. 50.1400	31107.1

3 x 14001 4.2X38mm	3 x 16000 ø 6mm
2X 14152	4 X 54164.10
2X 54162	1X 54163
2X 51580.10	2X 51209
32101	2+2.5 +3mm

51612	51613	MT0380.10	MT0332.10	MT0389.10	MT0390.10

